

PARTS LIST

CHASSIS

061H147D	Chassis H147D
063H057	Side panel H57 (right)
063H058	Side panel H58 (left)
063H061	Plate H61 (Power transformer)
063H056A	Voltage selector plate H56A
061H149	Chassis H149 (JACK BOARD)

PANEL

072H142A	Top panel H142A
072H141	End block H140 (right)
072H140	End block H141 (left)

HOLDER

064H177B	Holder H177B	(Chassis H147D) behind KBD
064H176	Holder H176	(Heat sink H33A)
064H092	Holder H92	(BENDER BOARD)
064H124	Holder H124	(BENDER BOARD)

COVER

065H135	Cover H135	(Top panel H142)
065H127B	Cover H127B	(Chassis H147D front)
065H126	Cover H126	(Slide Pot mask)
065H132	Cover H132	(BENDER BOARD slide Pot mask)
065H065	Cover H65	(Slide switch mask)

KNOB, BUTTON

016H098	Knob H98	(slider)
016H106	Knob H106	(rotary, BENDER BOARD)
016H102	Knob H102	(rotary, PANEL BOARD)
016H095	Button H95	(for SPQ009F)
016H085	Button H85	(White)
016H086	Button H86	(Purple)
016H087	Button H87	(Light blue)
016H088	Button H88	(Dark blue)
016H036	Button H36	(BENDER BOARD)

AC CORD SET

053H218	DC-320-J01	100V
053H219	UC-704-J01	117V 2P
053H220	EC-210-J06	220V 2P
053H221	EC-702-J05	240V 2P
053H222	SC-415-J06	240V 3P

SWITCH

13169503	ESE-3711	(VOLTAGE SELECTOR)
13149109	2wi XII	[POWER SWITCH (UL mark)]
13159322	HSW0372-01-520	(slide switch)
13129327	SPQ009F	(key switch)
13129717	KEH10003	(key switch, LFO-2)
13129531	SUT32A-1	(push switch, BEND)
13159138	SSS212B	(DIP)

JACK

13449125	HLJ0520-01-110
13449126	HLJ0520-01-010
13449226	HLJ4305-01-030

SOCKET

13429615	TCS5350-01-1111	(DIN)
13429710	PA-126	(AC inlet 100V, 117V, 220V)
13429708	CM-3	(AC inlet 240V)
13439851	HA16R-3P	(XLR)
13429511	IC-49-2406 #2	(24P)

CONNECTOR

13439119	5045-03A
13439120	5045-04A
13439122	5045-06A
13439123	5045-07A
13438124	5045-08A
13439126	5045-10A
13439127	5045-11A
13439130	5046-03A
13439131	5046-04A
13439132	5046-05A

TRANSFORMER

022H056A	100V, 117V, 220V, 240V	(Power)
12449229	DP-101	(Matching)

FILTER

13529105	DSS310-55D223S	(Bypass capacitor)
12449229	FKOB-160MH15	(Coil)

DIODE

15019629	05Z6.2X	(zener)
15019617	05Z11X	(zener)
15019639	1SZ59	(zener)
15219403	5P05M(50V) or 5P4M(400V)	(SCR)
15019254	2B4B41	(bridge rectifier)
15019247	GP-30G	(Hi-Fi Special)
15019103	1S2473	
15029150	GL-9PR12	(LED, red, package white)
15029149	GL-9PG12	(LED, green, package white)
15029151	GL-9HY12	(LED, yellow, package white)
15029152	GL-9HD12	(LED, red, package white)
10529148	GL-9ND2	(LED, red/YG, package white)
15029147	GL-9HD2	} (LED, red, high intensity) (package orange)
15029161	GL-9HD51A	
15029160	GL-9HD51 B or C	
15029162	BR5557K	(LED, red, high intensity) (package red all equivalent)

ARRAY

15019116	DAP-601
----------	---------